

Clack WSCI Valves Set up as Air Draw Filters.

Software version from 332.2

Please apply the settings in the following sequence.

Selections are made using the UP and DOWN buttons until the required setting is displayed.

After each setting press NEXT to continue.

Vessel Size	1054	1248	1354	1465	1665	1865
Softener valve OR Filter valve with Air Conversion.	1"	1"	1"	1" 1.25"	1" 1.25"	1" 1.25"

Step 1, Cycle Sequence,

Press NEXT and DOWN simultaneously for 3 seconds and release.

Screen will display SOFTENING flashing.

Press NEXT and DOWN simultaneously for 3 seconds, the screen will display SET 25, Adjust to the turbine setting below.

Set	1	1	1	1 1.25	1 1.25	1 1.25
Alternating		Off				or (see note 1 for options)
Set DP		Off				or (see note 2 for options)
Set Hardness				PPM		
SET Cycle 1				Backwash		
SET Cycle 2				Rinse		
SET Cycle 3				2nd Backwash		
SET Cycle 4				2nd Rinse		
SET Cycle 5				Brine Draw DN		
SET Cycle 6				END		

Step 2, System Setup.

Press NEXT and DOWN simultaneously for 3 seconds and release.

Screen will display SOFTENING flashing. (Leave as Softening)

Cycle 1 Backwash	5	5	5	5	5	5
Cycle 2 Rinse	3	3	3	3	3	3
Cycle 3 2nd Backwash	5	5	5	5	5	5
Cycle 4 2nd Rinse	3	3	3	3	3	3
Cycle 5 Brine Draw DN	15	15	15	15	15	15
Cycle 6 End				End		
Capacity				Leave as default (not used)		
Set Regen				Off (Regenerations will be based solely on the days override set)		
Set Time Regen				NORMAL (Regen occurs at the next Regen Set Time)		
Set Salt				Off		

Step 3, Display Settings.

Press NEXT and UP simultaneously for 3 seconds and release.

HARDNESS with -nA- will display on screen.

HARDNESS 2 with -nA- will display on screen.

Regen Day	2 Days
Set Regen Time Hours	Default 2:
Set Regen Time Min	Default :00

Step 4. Set time of day,

Press SET CLOCK

Set hours using the up and down buttons.

Set minutes using the up and down buttons.

Notes.

Air draw units should have a Lt Blue injector fitted and leave the brine line flow control in place.